

A-12000 COIL

This coil is imprinted that it is 12-volts, use with external resistor. If you are running 6-volts, the coil is good for 6-volts as it is, ignore the 12-volt writing on the side. If you are running a 12-volt system, you will have to add an external ballast resistor to the coil. This coil is only 12-volt if it is used with an external ballast resistor.