

A-4210-T PINION PULLER

1. Remove drive shaft housing tube, outer pinion nut and lock.
2. Place plate with large hole on front of housing with 2 bolts.
3. Next place plate with small hole over pinion shaft and secure with pinion nut.
4. Install 3 bolts in plate (lube threads). Tighten bolts in rotation till pinion and shaft are out of housing. You may have to run bolts back out and tighten pinion nut and start rotation over.
5. To install, place bearing race in housing slip tube over shaft install bolts and tighten in rotation and bearing will push in.

