

T-18751 Exhaust Whistle Adapter

Remove exhaust pipe from front of the muffler, and install whistle valve/cut out. Cut off exhaust pipe to necessary length, allowing about 1" to 1 1/4" to fit into the front of the whistle valve.

If your exhaust header pipe and exhaust valve fit together snugly, you are ready to re-install. If not, cut 4 slots 3/4" long, and secure with a clamp after installing and aligning it back on the car. Be sure that the lever (Open- Closed) works freely.

For opening, an original foot pedal works well, or for hand operation, a choke cable or hood release cable also works well (located on the upper section of the seat riser). A screen door spring makes a good return spring to hold the valve closed.