


T-2833-XR and T-2833-XL OUTER BEARING KIT FOR MODEL T FORDS INSTRUCTIONS

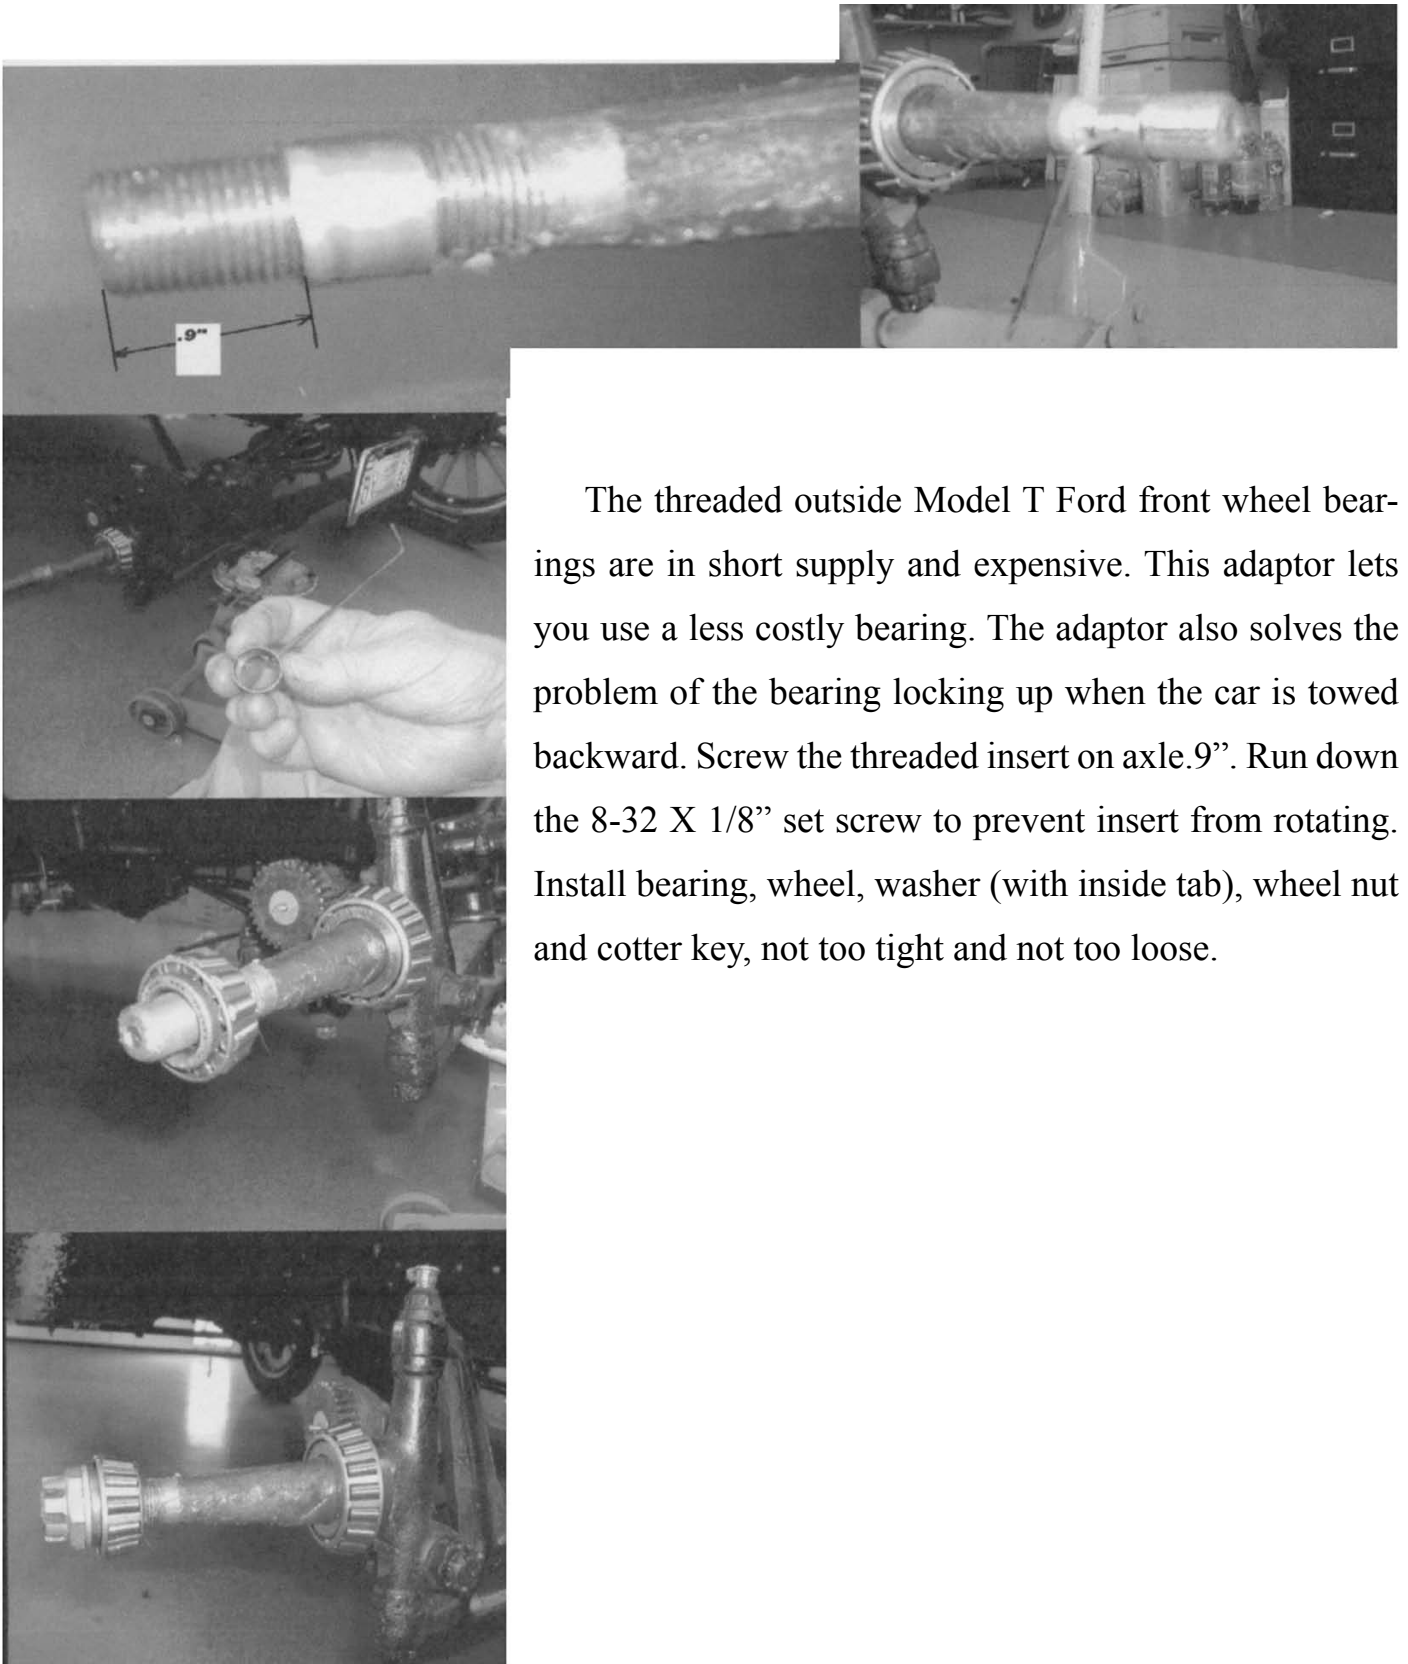

The threaded outside Model T Ford front wheel bearings are in short supply and expensive. This adaptor lets you use a less costly bearing. The adaptor also solves the problem of the bearing locking up when the car is towed backward. Screw the threaded insert on axle.9". Run down the 8-32 X 1/8" set screw to prevent insert from rotating. Install bearing, wheel, washer (with inside tab), wheel nut and cotter key, not too tight and not too loose.