

T-5119-B6 & T-5119-B Alternator Mounting Instructions

When mounting the alternator to the motor, do not use a gasket as this will restrict the air and cause the unit to run hotter than normal. Use a small amount of silicone gasket sealant for mounting.

For wiring, run a wire to the single terminal coming out of the unit that is only hot when the key is on. If you hook the normal wire that was hooked to your generator that was hot all the time, it will drain the battery. Just run a wire from your terminal block on the firewall that is hot all the time, it will drain the battery. Just run a wire from your terminal block on the firewall that is hot with the key on and dead with the key off.