

T-3919 Thermostat

Installation Instructions

Use 160 degree thermostat if you are not using a water pump.

Use 180 degree thermostat if you are running a water pump.

Drain about 1 gallon of coolant from system, (you need to drain enough coolant so you can remove the water outlet from the head).

Remove water outlet from head and install thermostat and gasket. Use a thin layer of gasket sealant to hold gasket in place. Be sure to install the thermostat in the proper direction as indicated on the thermostat. The end of the thermostat with the spring and copper or brass center goes toward the engine.

Add the coolant back to the radiator and you are ready to go.