


A-1225-SL AXLE HOUSING REPAIR RACE

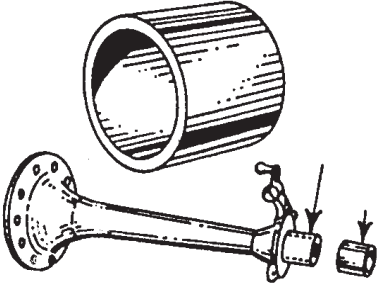

To use this repair race, you must have the end of your axle housing turned down. The axle housing needs to be about 1-1/2 thousands larger than the ID of this sleeve for a good press fit. When pressing sleeve onto axle housing, start the end of the sleeve that has a taper on the ID first.

Tip! Put your axle housing in the freezer for an hour or so and the sleeve will go on easier. We also recommend coating the ID of repair sleeve with some Loc-Tite adhesive which can be obtained at your local automotive parts store.