


A-17700-P Post Mirror Installation Instructions



STEP 1

Remove the hardware from the mirror head.

This hardware is not used in this installation.

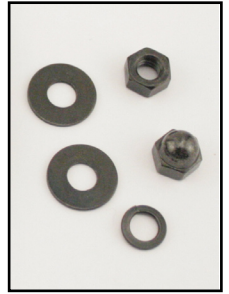

STEP 2

Place the mirror arm on the mirror head. Insert the acorn headed bolt into the side of the mirror arm and tighten.



STEP 3

Tighten acorn headed bolt until mirror head is attached.

