


A-6030-B MOTOR MOUNT INSTRUCTIONS

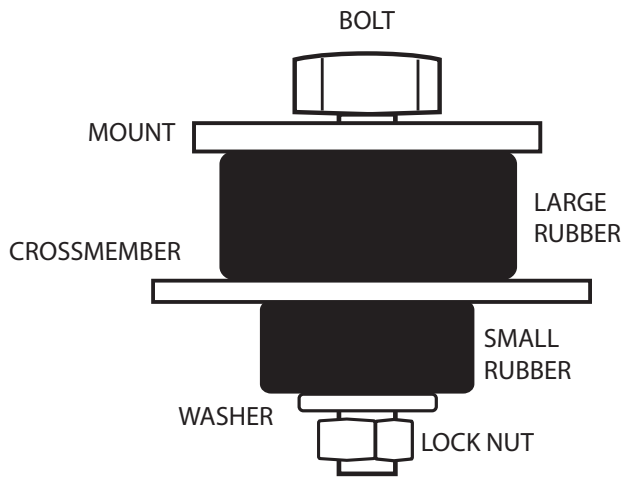

Hold engine up with jack. Remove old mount. install new mount to engine. Place two large pads between crossmember and motor mount. Center engine and drill two 7/16" holes in crossmember. Install bolt from top. Put small pad and washer on bolt from the underside of crossmember and install lock nut. Tighten.